


# Spraying and Agitation Using a Centrifugal Pump

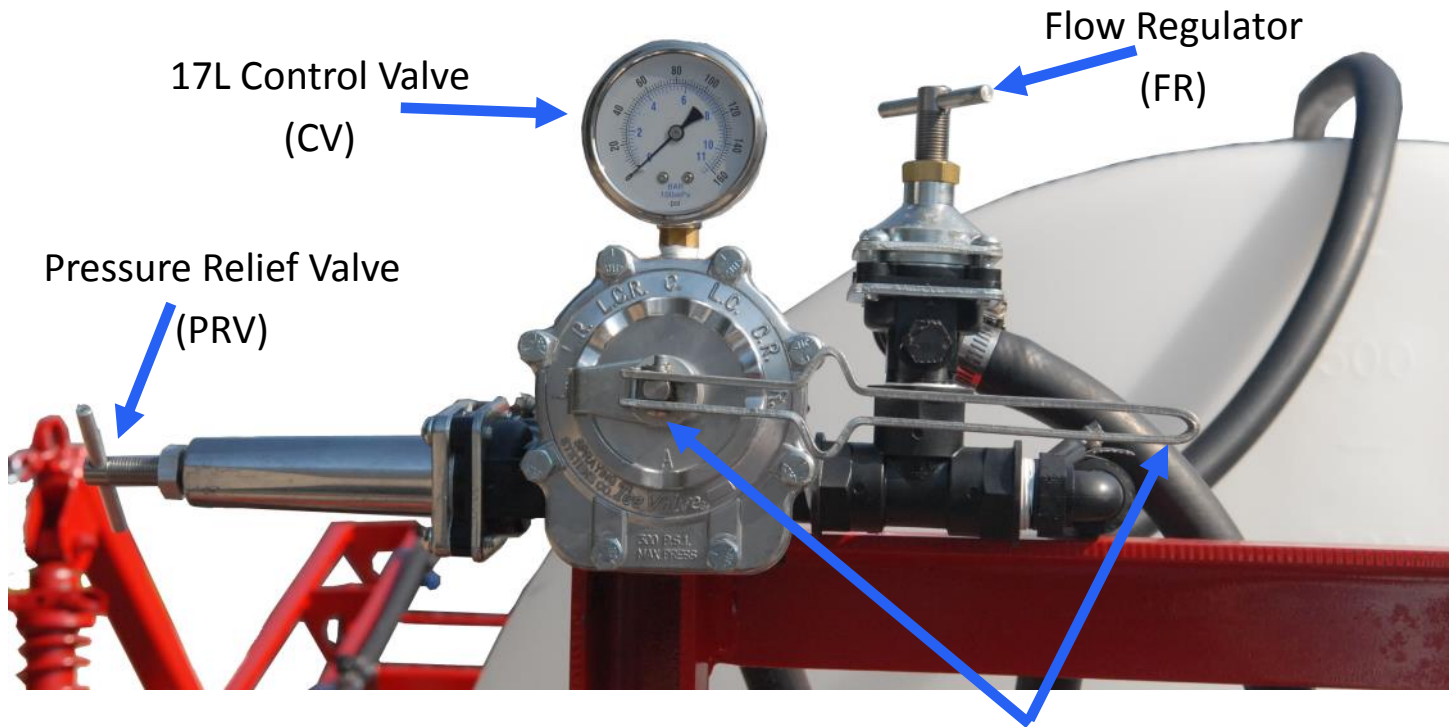

ON position— handle will be straight out

## Spraying Boomless Nozzles

- Select spray pressure.
- Set angle of nozzle to match desired spray width
- Select boom section

CV—OPEN to Spray or CLOSED to Stop

PRV—Set to desired pressure (lock the nut)

FR—Adjust OPEN (lock nut)

PTO PUMP—Turns ON or OFF spraying

## For Agitation

CV —CLOSED position

PRV—Adjust to maximum above  
40 PSI (lock the nut)

FR—Adjust OPEN (lock nut)

## Note:

- Control valve handle is straight out when ON  
Perpendicular to valve flow stops to boom (OFF)  
Mounted high to slow gravity feed when valve is open
- Pressure Relief Valve—Move IN for OFF & Move OUT for ON
- Flow Regulator—Set at maximum flow  
Safety valve for pressure

## NCI keeps records for each spreader or sprayer manufactured.



- These records are stored by serial number and will have complete information on your equipment as built.
- It will not reflect any changes made by the purchaser or other alterations.
- There may be differences in replacement part numbers due to technical improvements or changes in vendors / vendor supplies.



Before you call NCI for technical assistance, know the serial number from your equipment located on the left side rail on the unit.  
**1-800-241-1350**