


LIQUID BOOMLESS SPRAYER WITH CENTRIFUGAL PUMP

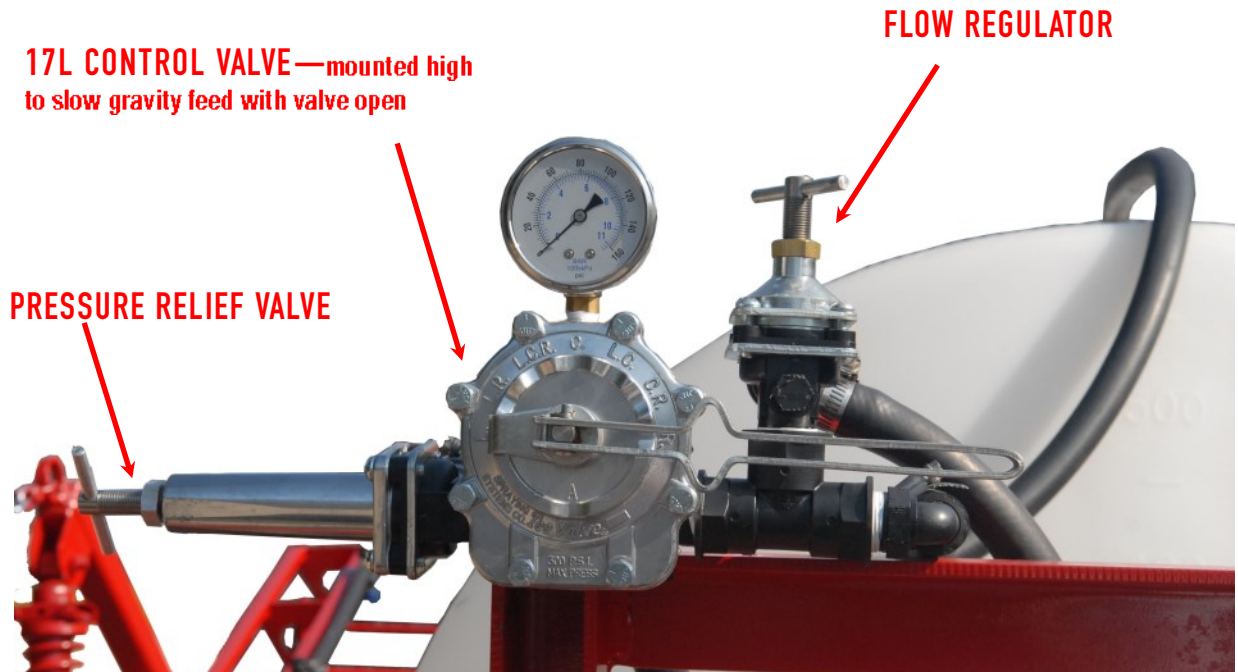

17L CONTROL VALVE—mounted high to slow gravity feed with valve open

FLOW REGULATOR

PRESSURE RELIEF VALVE

PRESSURE RELIEF VALVE (PRV) moves in and out

CONTROL VALVE (CV) handle is straight out when ON . In the above photos the CV is in the OFF position.

FLOW REGULATOR (FR)
Set at Maximum Flow

AGITATION

Churns water & chemical to uniform mixture

- CV closed position
- PRV Adjust to maximum above 40 PSI—lock down with lock nut
- FR Adjust open—lock down with lock nut

SPRAYING WITH BOOMLESS NOZZLES

Select spray pressure

Set angle of nozzle to match desired spray width

- CV closed position
- PRV Adjust to maximum above 40 PSI—lock down with lock nut
- FR Adjust open—lock down with lock nut